

How to use the Automatic Nozzle 'ZVA Slimline 2'



Take nozzle from dispenser.



Tank opening should be near dispenser.
Take nozzle towards the car,
spout pointing upward.




When spout tip is near tank
opening, tilt the nozzle.



Insert nozzle in tank opening.
Ensure nozzle is properly engaged
and cannot fall out.



When dispenser is ready, lift the
lever to dispense fuel.

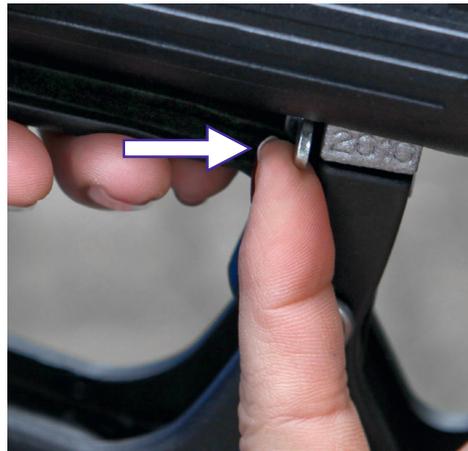

For hands-free refuelling, arrest
lever with hold-open latch.



Automatic shut-off, either by preset
or when tank is full. Wait for some
seconds before removing nozzle.



With spout pointing upward,
put back nozzle to dispenser.

Operating Elements of the Automatic Nozzle 'ZVA Slimline 2'

