

How to use the Automatic Nozzle 'ZVA Slimline 2'



Take nozzle from dispenser



Tank opening should be near dispenser. Take nozzle towards the car, spout pointing upward.




When spout tip is near tank opening, tilt the nozzle



Insert nozzle in tank opening. Ensure nozzle is properly engaged and cannot fall out.



When dispenser is ready, lift the lever to dispense fuel

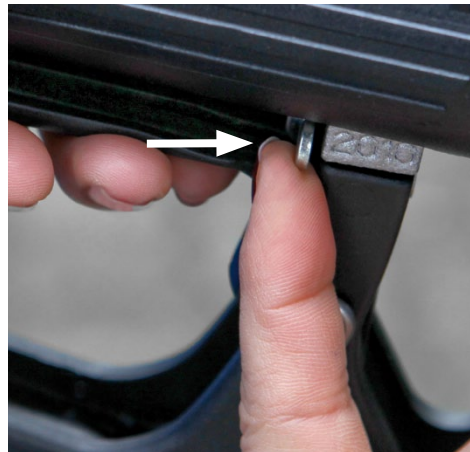

For hands-free refuelling, arrest lever with hold-open latch



Automatic shut-off, either by preset or when tank is full. Wait for some seconds before removing nozzle.



With spout pointing upward, put back nozzle to dispenser



spout

lever

hold-open latch